



LCD POWER SUPPLY TESTER

Model: **PS-224**

Manual:

- ▶ Plug-in your ATX power 24 pin and plug-in (P4/P6/P8) into the tester.
- ▶ Turn on your ATX power supply
- ▶ LCD shows each voltage and P.G. value on the screen automatic and you can hear 2 beep sounds.
- ▶ ATX power output connector checking one by one.
If power output is working, the LED will light on.
If power output failed, the LED will not light on.
- ▶ Plug-in (HDD/Floppy) connector and check LED light (+12V1/+5V)
- ▶ Plug-in SATA connector and check LED light (+12V1/+5V+3.3V)
- ▶ Remove the connector after your checking
- ▶ Do not plug-in 2 connectors into the tester at the same time
(Not include 24 pin connector)
- ▶ Abnormal voltage detected will not display on the screen.
- ▶ No voltage detect, "LL" will display on the screen.
- ▶ When detected Voltage is lower than Min. Value, "LL" will display on the screen.
- ▶ When detected Voltage is higher than Max. Value, "HH" will display on the screen.
- ▶ When detected voltage is lower than table value (A), will alarm.
- ▶ When detected voltage is higher than table value (B), will alarm.
- ▶ P.G. value detected lower 100ms or higher 900ms,
P.G. value is abnormal and alarm.
- ▶ When abnormal happened, it will alarm and relative digit blink on the screen.